



JP1 AND JP2 CONFIGURE FOR GPS MODEL
 T = IN FOR TRIPMATE, OUT FOR OTHERS
 N = OUT FOR TRIPMATE, IN FOR OTHERS

JP4 = OUT FOR PROGRAMMING
 JP4 = IN FOR NORMAL OPERATION

Co:	TAPR, INC.
Title:	PIC-E
CAD:	JOHN KOSTER, W9DDD
Author:	STEVE BIBLE, N7HPR
Date:	4/05/99
Revision:	2
Size:	A
Sheet	1 of 1